

Installation instructions Swing Gully Block – Retrofit


The solution for upgrading your existing panels



Items contained in the set



1. Mark the part to be cut out.

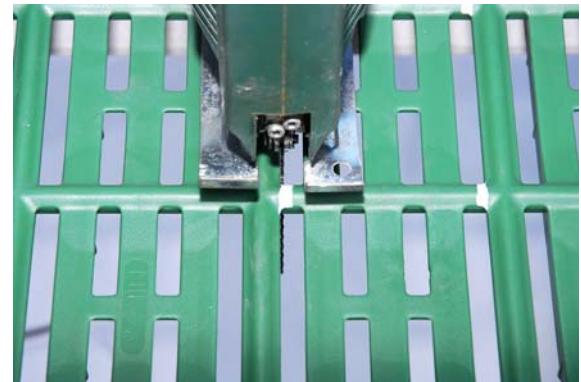

2. Cut out the part closely to the bars.



3. Panel with opening and cut out part.



4. Align the block with the corridor side.



5. Insert the box into the opening.



6. Pull the box tightly in the correct position.



7. Fix the box with cable straps.



8. Box fixed with 4 cable straps.




9. Heat up the tool with a flame and melt small holes into the box. Push the head of the tool completely through the box and panel.



10. Set in the screw immediately after welding when the plastic is still soft.



11. Tighten the screw with a box spanner.

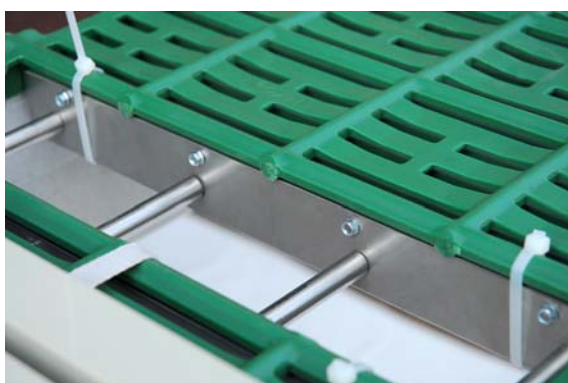

12. Completely bolted box. Remove the cable straps.



13. Finished installation!

- The assembly is to be made outside of the stable!
- When assembling please see to a sufficient ventilation! Do not inhale the fume when welding!
- The box must be bolted with all 8 screws enclosed in the set in order to ensure the required stability!